



Scan for more information

Questions or issues?
Let us help!

Call:
(201) 343-5202, Ext. 1

Installation Guide


Part #: 70-0345

Drill-Free C-Clip Anchor Kit

Drill-Free Adhesive Anchors for smooth, non-porous surfaces only, including tile, ceramic, or metal.

WARNING: Will not hold and may damage painted surfaces.

WARNING: Do not mount on hot surfaces.

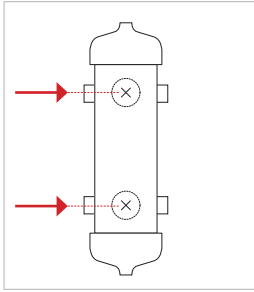


1

Mark desired location.



2

Use included alcohol pad to clean surface and allow to dry.

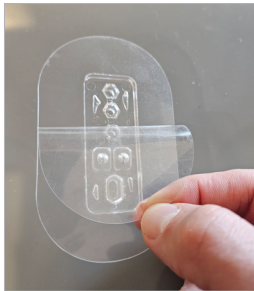

3

Peel protective film from the anchor, making sure not to touch the adhesive surface.



4

Place the anchor vertically in marked location (align center with hex nut).



5

Apply pressure to the entire anchor surface (with finger or a flat dull edge) to remove air bubbles and assure proper adhesion to the mounting surface.



6

Screw C- Clip into anchor and tighten until it's secure.

Note: Allow at least several minutes for adhesive to bond before applying load. Full strength achieved within 24 hours.

NEPHROS.COM